


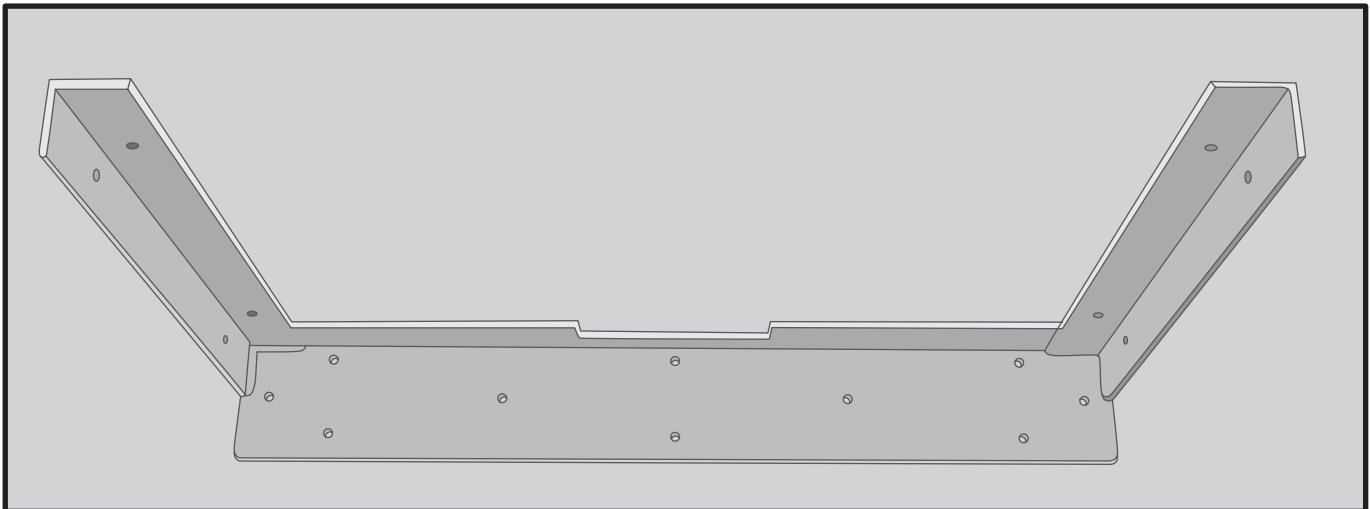

FLOATING VANITY SHELF BRACKET INSTALL

Floating Vanity Shelf Bracket Install

1. Select the appropriate size bracket for your shelf surface. The overhang should be maximum of 3" longer than the bracket.
2. Locate the cross blocking and hold the bracket directly over blocking at the desired height. Drywall anchors should not be used.)
3. Mark on the blocking the locations of the holes to be drilled, set the bracket aside.
4. Drill 3/16" pilot holes on the marked locations. Place bracket back into position and secure with 1/4" lag bolts.
5. Check for level and shim if necessary.
6. Apply a silicone sealant to the top of the brackets to secure the shelf surface to the brackets



A&M

HARDWARE, INC.

Call To Order (888) 647-0200

1165 Strickler Road, Mount Joy, PA 17552

www.AandMhardware.com