




ISLAND BRACKET INSTALL

Island Bracket Install

1. Select the appropriate size bracket for counter surface. The overhang should not exceed 6".
2. The Island bars can be spanned across cabinet for breakfast bar/island overhang or for open counter surface on either side of a knee/pony wall using the Island Vertical bracket.
3. Place the island bracket across cabinet or knee wall at desired location. Mark area bracket will be covering, remove bracket and set aside.
4. For vertical brackets, verify island bar is lined up on side of vertical stud. Place vertical bracket on the side of the stud marking spots to drill out for carriage bolts, drill out then install vertical using provided carriage bolts.
5. Route out the section the bracket will be passing through ½" deep. When using in combination with vertical bracket also drill 2 holes for bar and bracket attachment bolts.
6. Install bracket using screws to hold in place, adhesive can be put on bracket to secure counter in place.

NOTE: wood backing when used with metal studs.

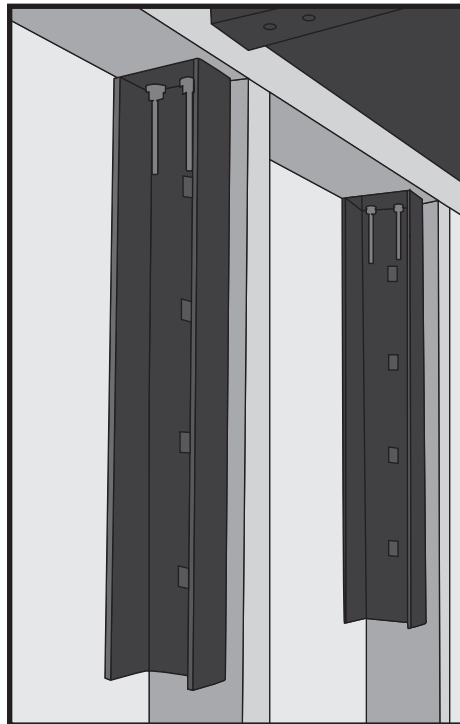

A&M **HARDWARE, INC.**

Call To Order (888) 647-0200

1165 Strickler Road, Mount Joy, PA 17552

www.AandMhardware.com