




RAISED VANITY BRACKET INSTALL

Raised Vanity Bracket Install

1. Select the appropriate size bracket for your counter/cabinet/bench surface. The overhang should be maximum of 6" longer than the bracket and a minimum of 3" to reduce visibility.
2. Locate the wall studs and hold the bracket directly over stud at the desired height. (Brackets must be installed into wall studs. Drywall anchors should not be used.)
3. Mark on the wall the locations of the holes to be drilled, set the bracket aside.
4. Drill 3/16" pilot holes on the marked locations. Place bracket back into position and secure with 1/4" lag bolts.
5. Check for level and shim if necessary.
6. Repeat for additional brackets. Brackets should be placed every 16 to 24" for optimum performance.
7. Apply a silicone sealant to the top of the brackets to secure the counter surface to the brackets

Note: wood backing when used with metal studs.

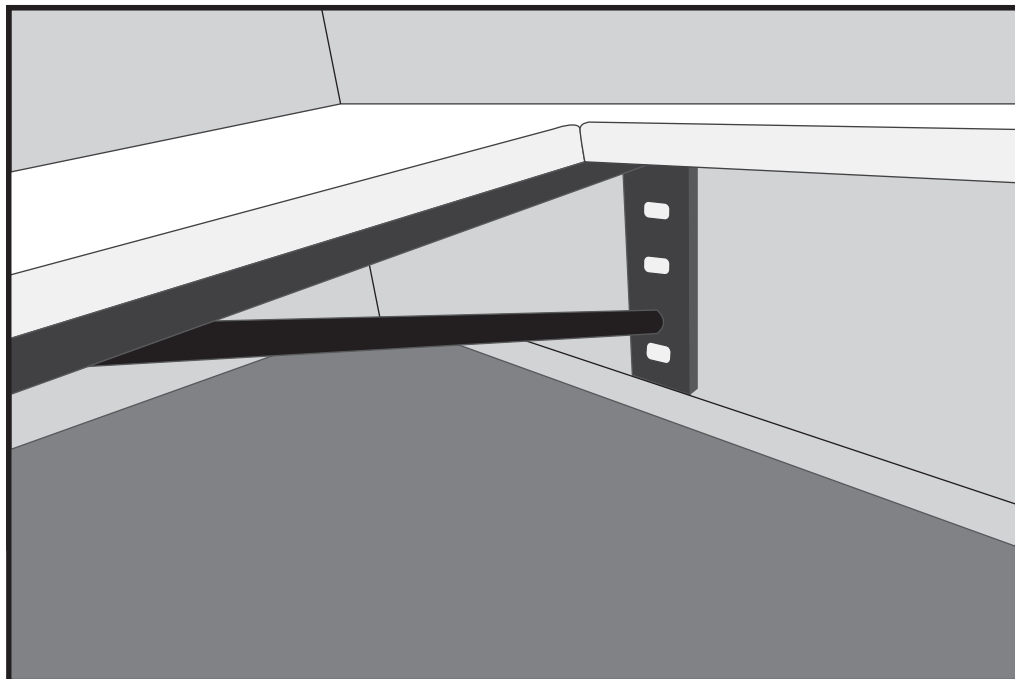

A&M

HARDWARE, INC.

Call To Order (888) 647-0200

1165 Strickler Road, Mount Joy, PA 17552

www.AandMhardware.com